

**Allgemeine Hinweise:**

- Lesen Sie diese Bedienungsanleitung vollständig und sorgfältig durch, bevor Sie das Produkt verwenden. Bewahren Sie diese Anleitung für sich und eventuelle weitere Benutzer zum späteren Gebrauch auf.
- Beachten Sie alle Hinweise und benutzen Sie das Produkt, Produktteile und Zubehör nur in einwandfreiem Zustand. Modifikationen des Produktes sind nicht gestattet.
- Bei Beschädigungen, technischen Defekten oder weiteren Problemen wenden Sie sich an Ihren Fachhändler.
- Die Wand / Installationsoberfläche muss die kombinierte Gesamtlast von Wandhalter und Gerät tragen können.
- Es sind mindestens 2 Personen erforderlich, um die genannten Arbeiten auszuführen. Eine Missachtung der Hinweise kann zu Geräte- und Deckenschäden oder Verletzungen führen.
- Beachten Sie ebenfalls alle Hinweise aus der Anleitung Ihres Bildschirms.

**Warnhinweise:**

- Prüfen Sie vor der Installation die Eignung der Wand für das anzubringende Gewicht und stellen Sie sicher, dass sich an der Montagestelle keine Strom- Gas-, Wasser- oder sonstige Leitungen befinden.
- Das mitgelieferte Montagmaterial ist nur für Betondecken geeignet. Verwenden Sie in jedem Fall für die gewählte Montagestelle geeignetes Montagmaterial.
- Ungünstig platzierte und installierte Produkte können Personen verletzen. Platzieren, installieren und transportieren Sie das Produkt, sowie Produktteile sicher. Führen Sie Installationsarbeiten nur mithilfe einer zweiten, geeigneten Person durch. Lassen Sie Demontage-, Wartungs- oder Reparaturarbeiten nur von geeignetem Fachpersonal durchführen.
- Kinder können an verschluckten oder eingeatmeten Kleinteilen und Verpackungsmaterial ersticken. Kleinteile und Verpackungsmaterial sind daher gegen unbeabsichtigte Nutzung zu sichern.
- Überprüfen Sie vor der Montage, ob Ihr Gerät mit diesem Wandhalter kompatibel ist und die gewünschten Funktionen bietet.
- Gehen Sie nach den abgebildeten Montagehinweisen vor (siehe Abbildungen). Zur Demontage verfahren Sie entsprechend in umgekehrter Reihenfolge. Die Festigkeit und Betriebssicherheit des DHS 12 ist in regelmäßigen Abständen zu prüfen, mindestens jedoch alle 3 Monate.


**Safety instructions:**

- Make sure these instructions are read and completely understood before attempting installation. Keep the manual for later reference.
- Pay attention to all instructions and use the product in flawless and proper condition only. Modifications of the product are not allowed.
- In case of any damage, defect or other problems please contact your local dealer.
- The wall/mounting surface must be capable of supporting the combined weight of the mount and display; otherwise the structure must be reinforced.
- 2 people are required for this installation. Failure to obey safety advices or attempting this installation alone can result in property damage or serious injury.
- Please pay additional attention to all instructions given in your monitor manual.

**Warnings:**

- Before starting the installation, check the wall's max. weight load and make sure you find a suitable mounting position. Make sure your mounting position does not cover any power-, gas-, water- or other lines can be damaged during installation.
- The included mounting accessories are suitable for concrete walls only. Make sure to use suitable mounting accessories for your selected mounting location. If necessary, buy suitable mounting accessories from a specialized dealer.
- Place, transport and install the product, all parts and accessories in a safe way. Unfavorable placed or installed products and cable connections can injure persons. Install the mount with the help of a second, suitable person. Disassembly, maintenance and repair work should only be done by authorized specialists
- Children can suffocate by swallowed or inhaled parts and insulation materials. Protect small parts and insulation material against unintentionally use.
- Prior to installation, make sure your screen is compatible with the DHS 12 and offers all features you desire.
- Start the mounting according to the illustrated instructions. For de-installation, complete all mounting steps in reverse. The secure and safe mounting of this product needs to be checked in regular intervals, at least every 3 months.

# TV Deckenhalter TV ceiling mount

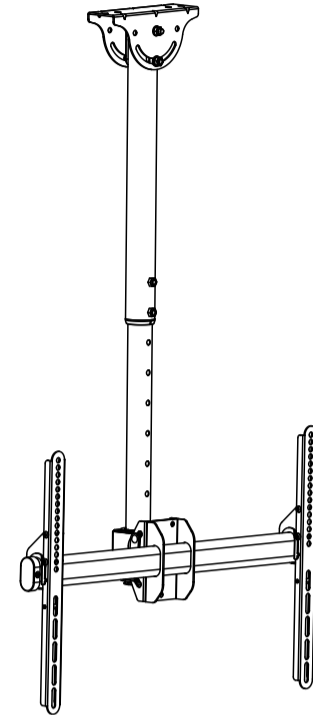

**Geeignet für Bildschirme 32" - 55"**  
**Suitable for displays 32" - 55"**

<b>VESA</b> min. 200 x 200 max. 400 x 400	<b>kg</b> <b>max.</b> <b>50 kg</b>	<b>- 25°</b> <b>NEIGBAR</b> <b>TILTABLE</b>	<b>±180°</b> <b>SCHWENKBAR</b> <b>PIVOTABLE</b>	<b>min. 780 mm</b> <b>max. 1130 mm</b>
---	--	---	---	---

