



Universal Wandhalterung Installations-Hinweise


WHS 115

Sicherheitshinweise

1. Stellen Sie zunächst sicher, dass Sie alle Anweisungen gelesen und verstanden haben, bevor Sie mit der Installation des Wandhalters beginnen.
2. Die Wand / Installationsoberfläche muss die kombinierte Gesamtlast von Wandhalterung und Gerät tragen können.
3. Es sind mindestens 2 Personen erforderlich, um die genannten Arbeiten auszuführen. Eine Missachtung der Hinweise kann zu Geräte- und Wandschäden oder Verletzungen führen.
4. Beachten Sie ebenfalls alle Hinweise bzgl. ausreichender Belüftung und geeigneter Montageflächen Ihres Bildschirms. Entsprechende Hinweise finden Sie in der Anleitung Ihres Bildschirms.

Befestigungsmaterial

- (A) Schraube (x5) (B) M6 x 20 Schraube (x4) (C) M6 x 30 Schraube (x4)



- (D) M8 x 30 Schraube (x4)



- (E) M8 x 50 Schraube (x4)



- (F) Abstandshülse (x4)



- (G) Unterlegscheibe (x4)



- (H) Dübel (x5)



- (I) Unterlegscheibe (x5)



- (J) Wasserwaage (x1)




Schritt 1 – Anbringen der Bildschirmhalter

Wichtig! Gehen Sie beim Aufbau besonders vorsichtig vor. Vermeiden Sie es, den Bildschirm auf die Vorderseite zu legen, da das Display zerkratzt werden könnte.

Hinweis: Die beiliegenden Schrauben eignen sich für einen Großteil aller verfügbaren Bildschirme. Evtl. müssen Sie nicht alle beigelegten Teile verwenden. Nutzen Sie unbedingt für Ihr Gerät passende Schrauben.

Hinweis: Das beiliegende Befestigungsmaterial ist nur für Standard-Untergrund geeignet. Verwenden Sie in jedem Fall geeignete Schrauben und Dübel für die Installation entsprechend Ihres Bildschirms und Ihrer Wand.

1. Bestimmen Sie den geeigneten Schrauben-Durchmesser durch vorsichtiges Ausprobieren verschiedener Schrauben (M6 oder M8). Gehen Sie dabei nicht mit Gewalt vor, verwenden Sie bei Widerstand der Schrauben einen kleineren Durchmesser.

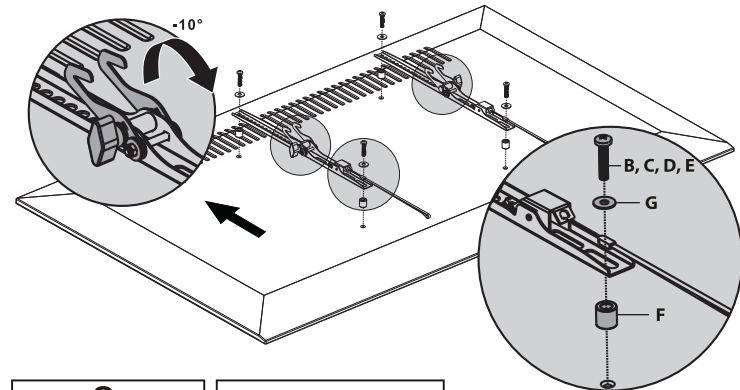


2. Bringen Sie die Haltearme an der Rückseite Ihres Bildschirms an. Verwenden Sie dazu die passenden Schrauben und Distanzhülsen.

3. Stellen Sie einen sicheren Halt der Schrauben sicher. Überdrehen Sie die Schrauben nicht und achten Sie darauf, dass sich die Schrauben nicht verkanten.

Schritt 2 – Anbringen der Wandhalterung

1. Gehen Sie bei der Montage mit äußerster Sorgfalt vor.
2. Das beiliegende Befestigungsmaterial ist nur für Standard-Untergrund geeignet. Verwenden Sie in jedem Fall geeignete Schrauben und Dübel für die Installation entsprechend Ihres Bildschirms und Ihrer Wand.
3. Die Wandhalterung darf nur an geeigneten Wänden montiert werden.
4. Verwenden Sie bei der Ausrichtung die Wasserwaage.
5. Stellen Sie sicher dass die Schrauben korrekt und fest sitzen und das Gewicht des Bildschirms tragen können, bevor Sie den Bildschirm auf die Halterung aufsetzen.

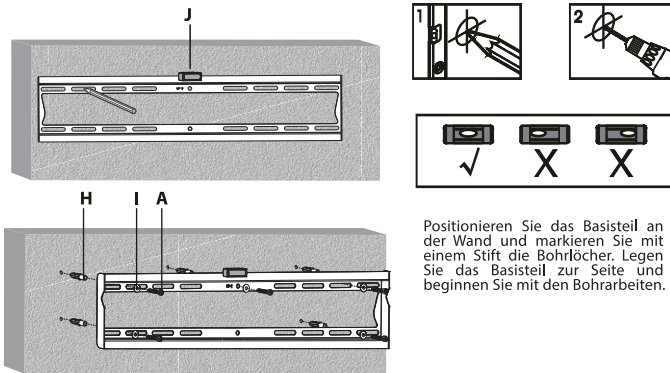


Positionieren Sie das Basisteil an der Wand und markieren Sie mit einem Stift die Bohrlocher. Legen Sie das Basisteil zur Seite und beginnen Sie mit den Bohrarbeiten.

Schritt 3 – Endgültige Positionierung des Bildschirms

1. Achten Sie darauf, dass der Bolzen des Sicherheits-Mechanismus eingerastet ist, bevor Sie den Bildschirm auf die Halterung aufsetzen (siehe Abbildung). Heben Sie den Bildschirm unter Mithilfe einer weiteren, geeigneten Person hoch und setzen Sie ihn vorsichtig auf die Halterung auf. Lassen Sie den Bildschirm nicht los, bevor die Haltearme nicht korrekt auf der Halterung eingehakt sind und der Sicherheits-Mechanismus einrastet (siehe Bild).

Hinweis: Damit der Bildschirm nicht unabsichtlich von der Halterung gestoßen wird, sollte eine Person den Bildschirm festhalten, bis die zweite Person alle restlichen Schritte abgeschlossen hat.

Um den Neigungswinkel des Bildschirms einzustellen, entriegeln Sie zunächst die Mechanik der Haltearme durch Drehen des Knopfes. Stellen Sie den gewünschten Winkel ein. Wenn die endgültige Position des Bildschirms erreicht ist, verriegeln Sie die Mechanik durch Drehen des Knopfes.

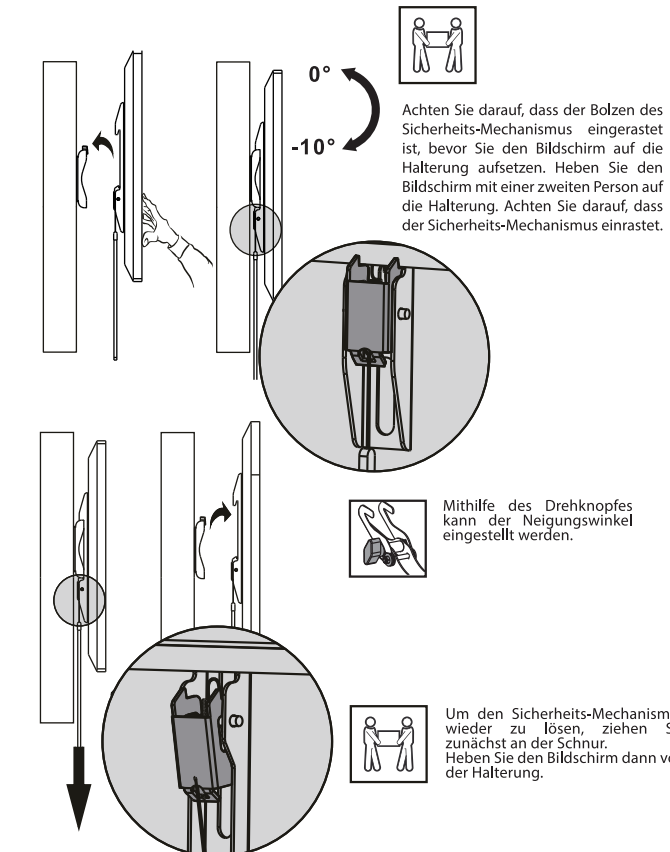

Achten Sie darauf, dass der Bolzen des Sicherheits-Mechanismus eingerastet ist, bevor Sie den Bildschirm auf die Halterung aufsetzen. Heben Sie den Bildschirm mit einer zweiten Person auf die Halterung. Achten Sie darauf, dass der Sicherheits-Mechanismus einrastet.

Mithilfe des Drehknopfes kann der Neigungswinkel eingestellt werden.

Um den Sicherheits-Mechanismus wieder zu lösen, ziehen Sie zunächst an der Schnur. Heben Sie den Bildschirm dann von der Halterung.



universal wall mount installation advice


WHS 115

Warnings

1. Make sure these instructions are read and completely understood before attempting installation.
2. The wall mounting surface must be capable of supporting the combined weight of the mount and display; otherwise the structure must be reinforced.
3. A minimum of two people is required for this installation. Failure to obey safety advices or attempting this installation alone can result in property damage or serious injury.
4. Follow all instructions or recommendations regarding adequate ventilation and suitable locations for mounting your display. Consult the manual of your display for more information.

Hardware Kit

- (A) screw (x5)



- (B) M6 x 20 screw (x4)



- (C) M6 x 30 screw (x4)



- (D) M8 x 30 screw (x4)



- (E) M8 x 50 screw (x4)



- (F) spacer (x4)



- (G) washer (x4)



- (H) concrete anchor (x5)



- (I) washer (x5)



- (J) water gauge (x1)




Part 1 - Attaching the mounting bars

Important: Use extra care during this part of installation. If possible, avoid placing your display face-down, because the viewing surface may be damaged.

Note: Your mount comes with a selection of screws with different lengths and diameters to accomodate a wide variety of display models. Maybe not all of the hardware kits' content needs to be used. You will need only those screws and washers which can fit your display.

Note: The included mounting accessories are to be used for standard walls only. Please use screws and mounting accessories that are suitable for your walls and display when installing the mount.

1. Determine the correct diameter of screws to use by carefully trying the different screws (M6 or M8) from the hardware kit. Do not force any of the screws into position - if you feel resistance, stop immediately and try a smaller diameter bolt.

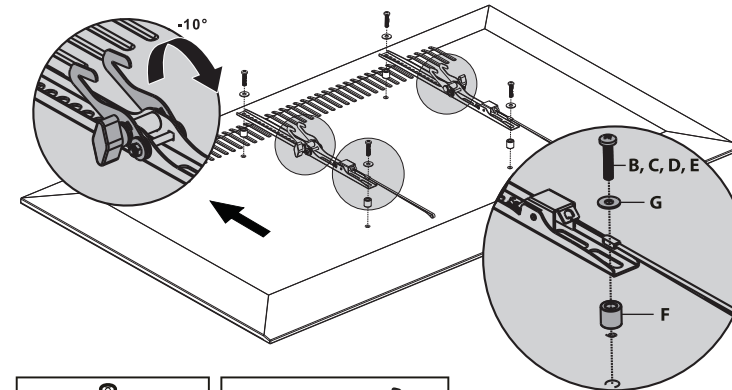


2. Use the appropriate screws and spacers determined in step 1 to attach the mounting bars to the back of your display. Further, use the appropriate spacers and washers.

3. Make sure all screws are fitting and fully tightened. Do not overtighten the screws and make sure they are in straight position. Make sure that the mounting arms are completely fixed and tight to your screen before you continue with the installation.

Part 2 - Mounting the wall plate

1. Be extra careful during this part of installation.
2. The included mounting accessories are for standard walls only. Please use screws which are suitable to your wall when installing the mount.
3. The wall plate should only be mounted on suitable walls.
4. Use the water gauge (H) to level the wall plate during installation.
5. Ensure tight fit of all screws and make sure they can hold the complete weight of your wall mount and display before you continue.

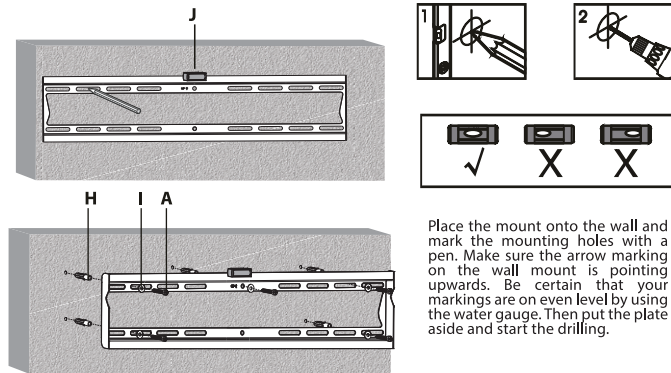


Place the mount onto the wall and mark the mounting holes with a pen. Make sure the arrow marking on the wall mount is pointing upwards. Be certain that your markings are on even level by using the water gauge. Then put the plate aside and start the drilling.

Part 3 - Final installation and adjustment

1. Push the safety spring lock to locked position before attaching TV to the wall plate. With the help of another suitable person, carefully lift your display and put it onto the wall mount. Do not release the display until it is properly and securely hooked onto the wall mount. Make sure the safety lock is in locked position before releasing the display.

Note: To avoid the display being accidentally knocked off the mounting bar, the second person should hold and secure the display while the other person continues the mounting, until all further steps are completed and the safety lock is in locked position.

To change and adjust the viewing angle, unlock the tilting mechanism by turning the knob at the side of the mounting arm. When the tilting mechanism is unlocked, adjust the angle by moving your display into the desired position and re-tighten the knob when you are finished.

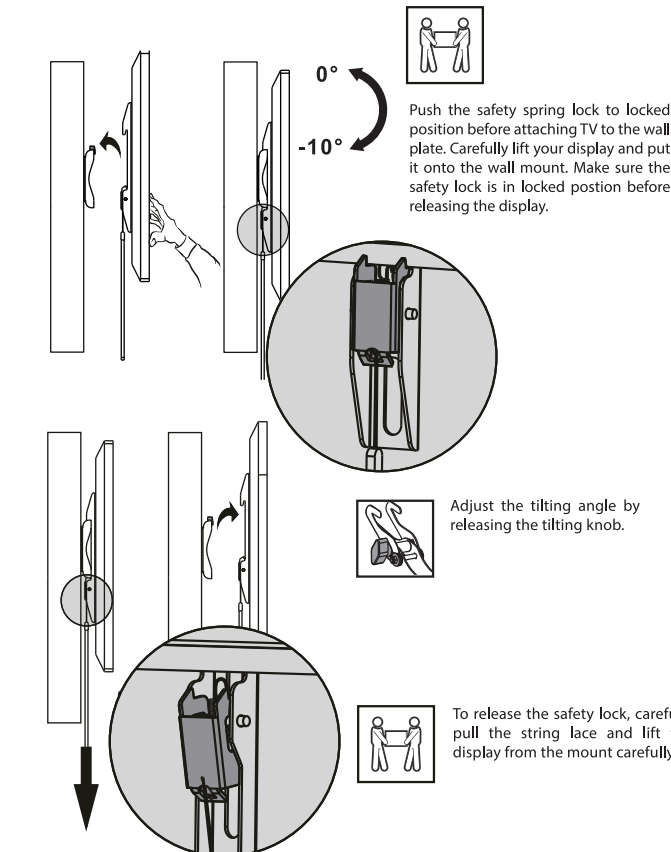

Push the safety spring lock to locked position before attaching TV to the wall plate. Carefully lift your display and put it onto the wall mount. Make sure the safety lock is in locked position before releasing the display.

Adjust the tilting angle by releasing the tilting knob.

To release the safety lock, carefully pull the string lace and lift the display from the mount carefully.



e+p Elektrik Handels GmbH & Co. KG • Am Ohrt 7 • 59469 Ense-Höingen, Germany
Tel: 02938/98762-0 • Fax: 02938/98762-22 • Email: mail@e-und-p.de • Internet: http://www.e-und-p.de



e+p Elektrik Handels GmbH & Co. KG • Am Ohrt 7 • 59469 Ense-Höingen, Germany
Tel: 02938/98762-0 • Fax: 02938/98762-22 • Email: mail@e-und-p.de • Internet: http://www.e-und-p.de